


INSTALLATION INSTRUCTIONS FOR EMERGENCY EXIT SIGN

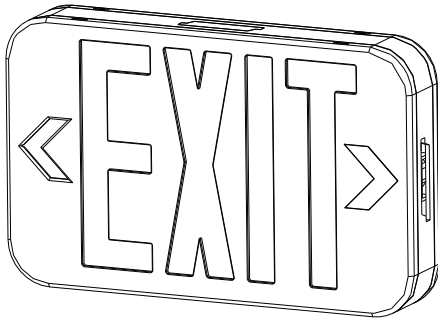

IMPORTANT:

Battery in this unit may not be fully charged.
After electricity is hooked up to unit, let the battery
charge up for at least 24 hours.
Then normal operation of this unit should take effect.

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1) Do not use outdoors.
- 2) Do not mount near gas or electric heaters.
- 3) Use caution when handling batteries. Avoid possible shorting.
- 4) Equipment should be mounted in locations and at heights (MAX: 8ft) where it will not be subject to tampering by unauthorized personnel.
- 5) The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- 6) Do not use this equipment for other than its intended use.
- 7) Before wiring to power supply, turn off electricity at fuse or circuit breaker.
- 8) Consult local building code for approved wiring and installation.
- 9) Installation and servicing should be performed by qualified personnel.


SAVE THESE INSTRUCTIONS INSTALLATION INSTRUCTIONS

CEILING & END MOUNTING (FIG.1) & (FIG.2).

- 1) Connect input as shown in wiring diagram below and fasten canopy to J-box bracket.
- 2) Snap housing to canopy.
- 3) Secure faceplate to housing and remove the proper arrow as required.



(FIG.1)

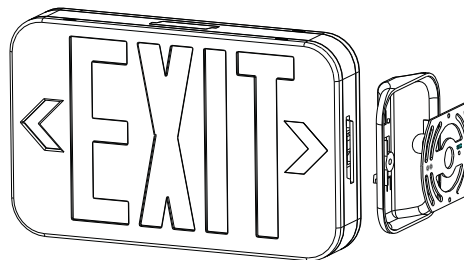

(FIG.2)

OPERATION

1. The unit is shipped from the factory with the color selector jumper set to “RED” (see figure 2 – jumper is placed across pins 2&3) and use the red diffuser.
2. To change the color to “GREEN”, move the color selector jumper to “GREEN” (see figure 1 – jumper is placed across pins 1&2) and use the green diffuser.

Figure 1



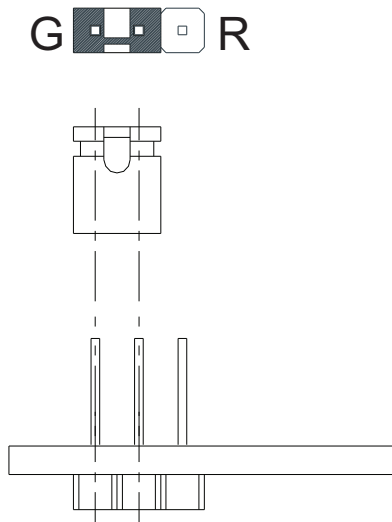



Figure 2

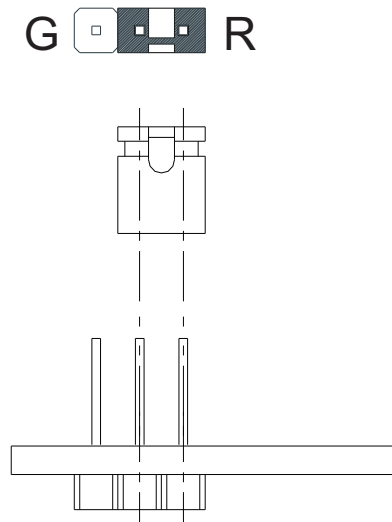

WIRING DIAGRAM

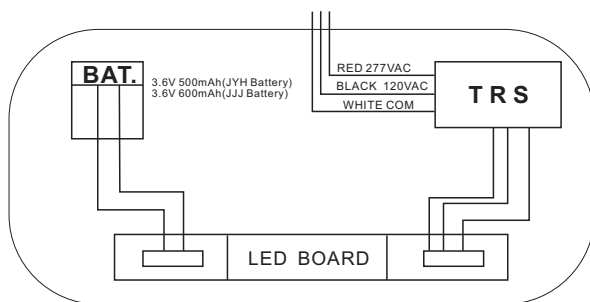

Dual Micro EXIT (with battery)

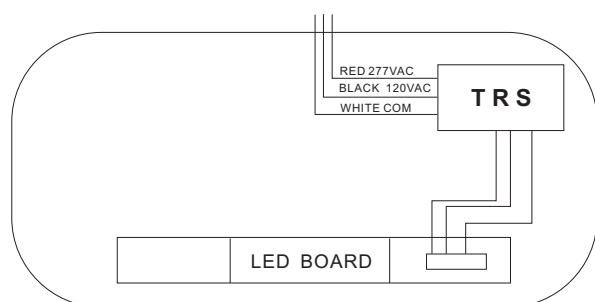

Dual Micro EXIT (without battery)

WARNING:

Unused wires must be capped using enclosed wire nuts.