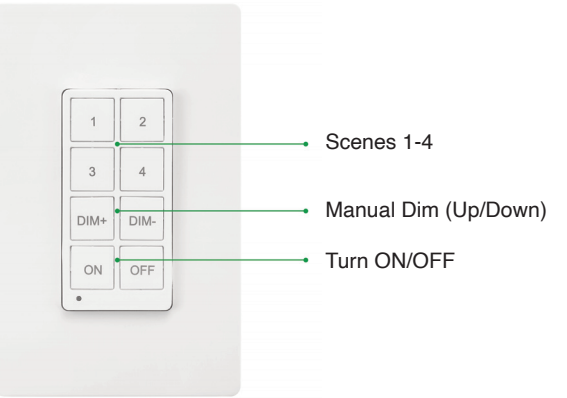
MaxLite® 8 Button Wall Switch / Bluetooth Network Controls

General Safety Information

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- DO NOT INSTALL DAMAGED PRODUCT!



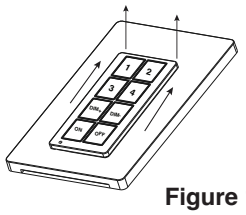
Models: WNS8-W

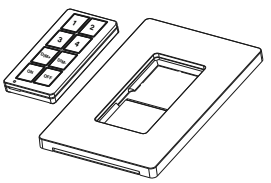
Included in the box:
A: 8-button controller with back and front cover plate
B: CR2032 batteries (1pcs)
C: M3.5 19mm Flat head screws with anchors for mounting (2pcs)
D: Mounting plate for junction box (for Junction Box mount only)
E: #6-32 5/8" Machine screws for junction box mounting (2pcs)

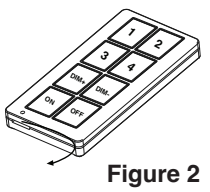
Wall Mount Instructions

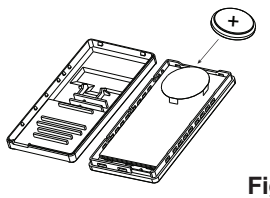
1. Remove the 8-button scene controller from the cover plate by gently pulling it from the top and sliding it up through the slots. (**Figure 1**) Separate front cover plate from back cover plate if necessary to help remove the 8-button scene controller.
2. Use the slot at the bottom of the 8-button scene controller to pry open and locate the battery terminals within the enclosure. (**Figure 2**)
3. Insert the CR2032 battery in the terminal. Slide the battery into position and ensure that it's secured in the contact holder and the positive side of the battery is facing upwards as shown. (**Figure 3**)
4. Re-attach the 8-button controller enclosure in place. (**Figure 4**)
5. Pry open the bottom of the cover plate assembly to detach the front cover plate from the back cover plate. (**Figure 5**)
6. Use the screws (**C**) provided or double-sided adhesive tape (not included, sold by others) to mount the back plate on to the wall.
7. Slide the 8-button controller into the back cover plate. Re-attach the front cover plate with the back plate and snap into place. (**Figure 6**)

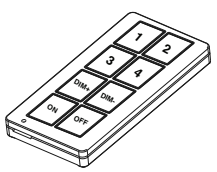
Note: Blue light indicator suggests batteries are in good condition. Flashing Red light indicator suggests battery running low. Replace with CR2032 battery with the correct polarity to avoid product damage.

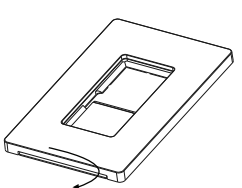

Figure 1

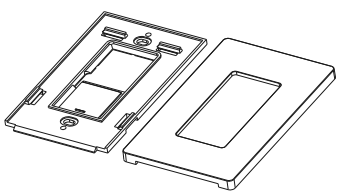


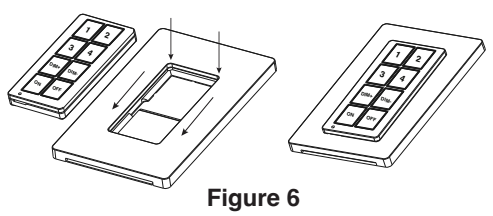

Figure 2


Figure 3


Figure 4




Figure 5


Figure 6

© Copyright 2024. MaxLite, Inc. All Rights Reserved.
342 Changebridge Rd, STE 201, Pine Brook, NJ 07058 Tel: 973-244-7300 Fax: 973-244-7333 Email: info@maxlite.com

MaxLite® 8 Button Wall Switch / Bluetooth Network Controls

Junction Box Mount Instructions

1. Follow Step 1 through 4 of the wall mount instructions.

2. Use the screws (**E**) to mount the mounting plate for junction box.

3. Slide the 8-button controller into the cover plate. **(Figure 1**)

4. Attach a standard Decora Faceplate (not included.)

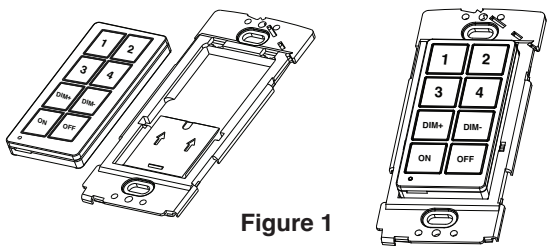


Figure 1

Commissioning with c-Max App

To enter pairing mode simultaneously press and hold the "DIM+" and "ON" buttons for a few seconds until the blue light stays on.

1. In c-Max App "Switch" page, click to add the switch.
2. Select the light or group to be controlled by this switch.
3. Select 4 scenes to be controlled by this switch.

Refer to the c-Max Commissioning Guide on www.maxlite.com/cmax

Warranty

MaxLite offers a 5 year warranty on this product, please see: http://www.maxlite.com/resources/warranties for more information.

© Copyright 2024. MaxLite, Inc. All Rights Reserved.
342 Changebridge Rd, STE 201, Pine Brook, NJ 07058 Tel: 973-244-7300 Fax: 973-244-7333 Email: info@maxlite.com