

# C67602/C67603

## INSTALLATION INSTRUCTIONS SHEET

### START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.


**Technical Support:** 1-844-628-8368

### Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

*CE LUMINAIRE NE DOIT PAS ETRE MONTE SUR UNE BOITE DE SORTIE NI SUPPORTE PAR UNE TELLE BOITE*

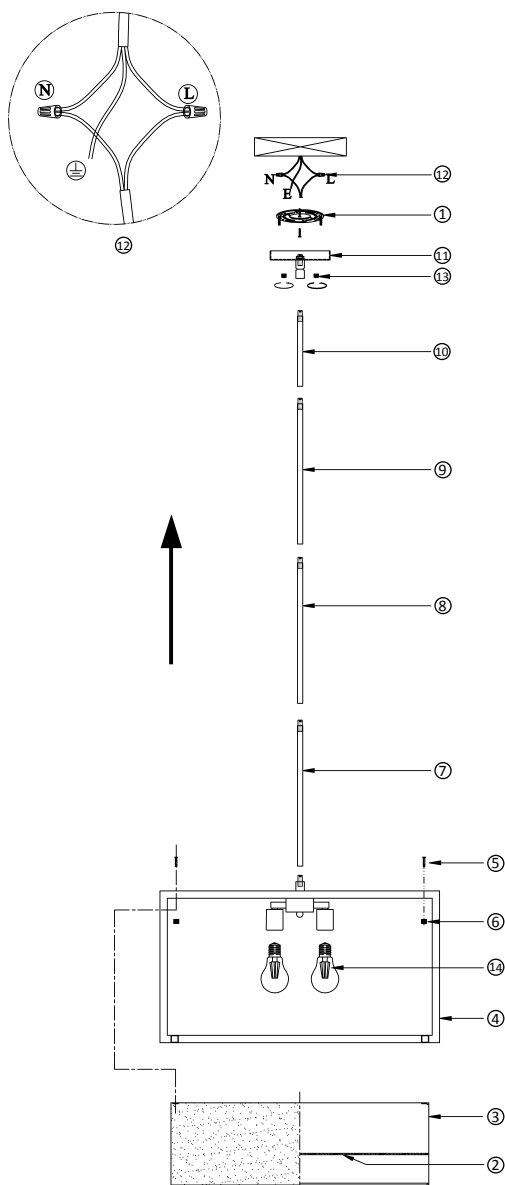

- 1 Ensure main supply is switched off.
- 2 Fit round mounting bracket(1) onto junction box with self-tapping screw.
- 3 Remove film from acrylic diffuser(2) and place into shade(3). Fix shade onto fixture(4) with screws(5) and nuts(6) from the side.
- 4 Make wire across rod(7,8,9,10) in order and screw all rods onto canopy(11).
- 5 Connect wires(12) according to color (White to White, Black to Black). Connect all earth plug together onto the crossbar with green screw to tight.
- 6 Fix canopy onto mounting bracket with finials(13).
- 7 Install lamps(14) onto lampholders
- 8 Reconnect power.