

C74206, C74208

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.


Technical Support: 1-844-628-8368

Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

CE LUMINAIRE NE DOIT PAS ETRE MONTE SUR UNE BOITE DE SORTIE NI SUPPORTE PAR UNE TELLE BOITE

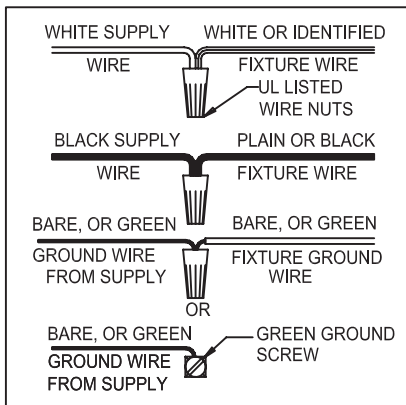

- 1 Ensure main supply is switch off
- 2 Install green screw ③ and installing screws ⑨ into mounting strap ⑧, install nuts ④ into installing screws ⑨, then fix mounting strap into J-box (not provided) using screws ⑤.
- 3 Have the wires through the rods ⑬ & ⑫ and chain loop ⑪, install rod ⑫ onto ⑭, have the rods ⑫ fastened with nipple ⑬ (install the rod quantity per your need), tighten the rods ⑫ to the chain loop ⑪, fasten the two ends of chain ⑳ into the chain loops ⑪ & ⑲, then have the wire through ⑳, ⑲, ⑥.
- 4 Connect the wires ⑩ & ② using wire nuts, then fix the canopy ⑥ onto the installing screws ⑨ using nuts ⑦.
- 5 Install lamp ⑥ (not provided) to the socket ⑰, then put the glass shade ⑮ into the socket cup ⑱.

