


4" SLIM LIGHTS SLIM4BP-DL-5CCT

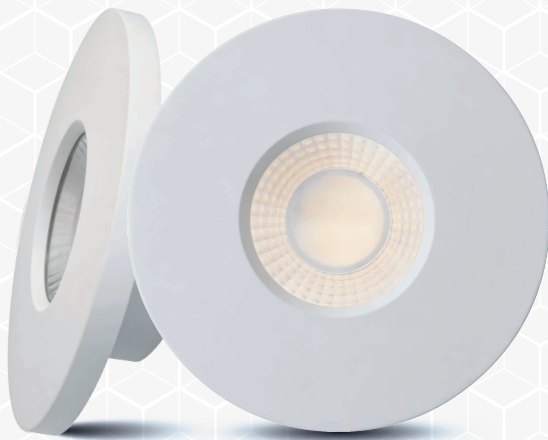

WARNING

WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

- LED Slim lights are suitable for indoor use only
- Please keep the LED Slim lights away from any corrosive substance, and please use dry cloth when you clean it
- Before installation or maintenance, please disconnect the power to prevent electric shock

CAUTION

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

- Electrical products can cause death or injury, or damage to property.
- If in any doubt about the installation or use of this product, consult a competent electrician.

INCLUDED COMPONENTS

1 x Low-profile Junction Box Downlight
2 x Screws

SOLD SEPARATELY




3 x M3 Screws
3 x Clips
1 x Medium base adaptor with quick connectors

SAFETY

For your safety, this fixture must be wired in accordance to local electric codes and ordinances.

SEMI-RECESSED MOUNT INSTALLATION

1. Cut the terminal ring at the end of the ground wire (green) at the back of the fixture. Make the electrical connections. Connect the ground wires (green). Connect the neutral wire (white). Connect the live wire (black) [Fig. 1].
2. Secure the fixture to the junction box with the provided screws [Fig. 2].
3. Align the face ring with the notch and rotate clockwise. [Fig. 3]
4. Turn on the power for testing.

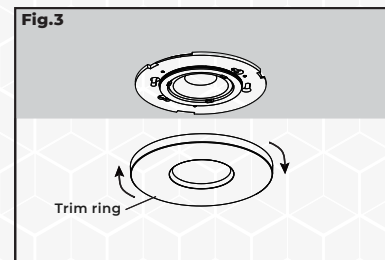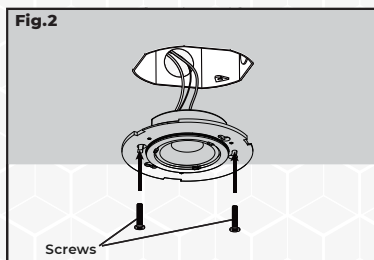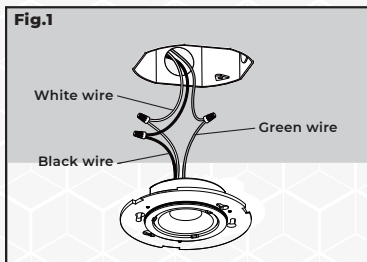

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.



4" SLIM LIGHTS SLIM4BP-DL-5CCT

RECESSED HOUSING INSTALLATION

1. Secure the clips to the fixture with the three (2) screws provided [Fig. 4].
2. Secure the medium based adaptor into the socket in the recessed housing (see Fig. 5).
3. Insert the wires from the fixture into the quick connector. Connect the live wire (black) to the marked slot of the quick connector [Fig. 6].
4. Connect the ground wire (green) by securing the terminal ring to the recessed housing using the self-tapping screw. Use 3 mm (1/8") drill bit to drill the hole on the recessed housing for the self-tapping screw. (Hook up the light with the medium base adaptor by the quick connectors.) Squeeze spring clips and install the fixture into the recessed housing. Make sure the fixture is centred [Fig. 7].
5. Align the face ring with the notch and rotate clockwise [Fig. 8].
6. Turn on the power for testing.

